


**FRONT POWER DISTRIBUTION BOX**

**FRONT POWER DISTRIBUTION BOX FUSES**

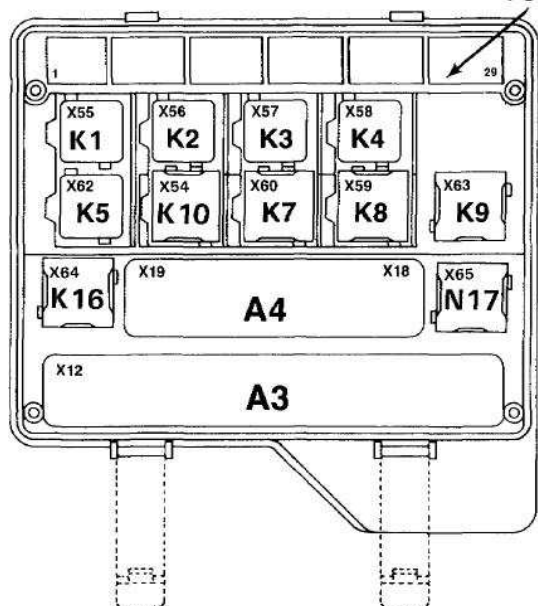

COMPONENTS IN FRONT POWER DISTRIBUTION BOX		
NUMBER	CONNECTOR	DESCRIPTION
A3	X12	LAMP CONTROL MODULE
A4	X18, X19	CHECK CONTROL MODULE
K1	X55	STARTER RELAY
K2	X56	HORN RELAY
K3	X57	UNLOADER RELAY, KLR
K4	X58	BLOWER RELAY
K5	X62	INTENSIVE WASH PUMP RELAY
K7	X60	PARKING LIGHT MONITOR RELAY
K8	X59	FRONT DEFOGGER/WATER PUMP RELAY
K9	X63	UNLOADER RELAY, KL15
K10	X54	ABS RELAY
K16	X64	HAZARD FLASHER RELAY
N17	X65	CRASH CONTROL UNIT

10 / 87

0660-00

1988

