




POWER DISTRIBUTION CHARTS

FRONT POWER DISTRIBUTION BOX

FRONT POWER DISTRIBUTION BOX

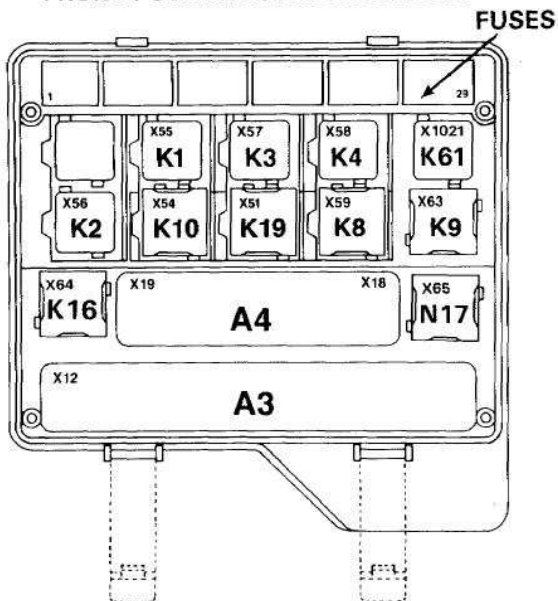

COMPONENTS IN FRONT POWER DISTRIBUTION BOX		
NUMBER	CONNECTOR	DESCRIPTION
A3	X12	LAMP CONTROL MODULE
A4	X18, X19	CHECK CONTROL MODULE
K1	X55	STARTER RELAY (AUTO)
K2	X56	HORN RELAY
K3	X57	UNLOADER RELAY, KLR
K4	X58	BLOWER RELAY
K8	X59	FRONT DEFOGGER/WATER PUMP RELAY
K9	X63	UNLOADER RELAY, KL15
K10 (WITH-ASC)	X54	ABS OVERVOLTAGE PROTECTION RELAY
K16	X64	HAZARD FLASHER RELAY
K19	X51	COMPRESSOR CONTROL RELAY
K61	X1021	UNLOADER RELAY, KL61
N17	X65	CRASH CONTROL UNIT

